



EN
DIGITAL KETTLE

EK-01

Instruction manual





Thank you for purchasing
the **ZEST by ZEPTEK** Digital Kettle.

We designed this product with convenience and efficiency in mind, so you can enjoy your Digital Kettle for years to come.

This guide will help you maximize the benefits of your ZEST by Zepter Digital Kettle. Please review these instructions carefully to understand its operation and maintenance procedures.



Scan the QR code
to access to
another languages

CONTENT

01	SAFETY INSTRUCTIONS	1
02	KNOW YOUR DIGITAL KETTLE	3
03	BEFORE FIRST USE	4
04	INSTRUCTIONS FOR USE	4
05	CLEANING AND MAINTENANCE	6
06	TROUBLESHOOTING	7
07	PRODUCT COMPLIANCE AND DISPOSAL INFORMATION	8
08	CONTACT ZEPTER	8
09	WARRANTY STATEMENT	9
10	WARRANTY CARD	10

01 SAFETY INSTRUCTIONS

- The safety precautions and the instruction manual are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.
- Please keep the instructions, the warranty card, the sales receipt, and, if possible, the gift box with the inner packaging.



WARNING!

To protect children from the dangers of electrical appliances, never leave them unsupervised with the product.

- Check that the voltage of your power supply matches the voltage rating of the electric kettle.
- Always remove the plug from the socket whenever the device is not in use and before cleaning. Pull on the plug, not on the cable. Allow the appliance to cool before putting on or taking off parts and before cleaning.
- Test the electric kettle and cable regularly for damage. If any damage is found, do not use it.
- If the power cord is damaged, or if the appliance malfunctions or has been damaged in any way, it must be repaired by the manufacturer or a service agent in order to avoid a hazard.
- Keep the electric kettle and the cable away from heat, direct sunlight, moisture, the edge of the table or counter, and similar hazards.
- Use only original accessories.
- If the kettle is overfilled, boiling water may be ejected.
- Do not use the electric kettle outdoors.
- Use kettle only in flat and dry surfaces.
- Do not use kettle to heat anything other than water.
- Do not fill above the "MAX" indication.
- Do not operate kettle if water is below "MIN" indication.
- Never immerse the electric kettle in water or any other liquid, or allow it to come into contact with liquid. Do not use the electric kettle with wet hands.

- If the electric kettle becomes moist or wet, remove the mains plug from the socket immediately.
- This appliance can be used by children aged 8 years and above, and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction on the safe use of the appliance and understand the hazards involved.
- Never leave the appliance unattended when in use.
- Cleaning and user maintenance should not be carried out by children unless they are over 8 years old and supervised.
- Keep the appliance and its cord out of the reach of children under 8 years old.



WARNING!

Do not touch hot surfaces; use handles or knobs.

- To protect against fire, electric shock, and injury to persons, do not immerse the cord, plug, or (state specific part or parts in question) in water or any other liquid.
- Do not use a power base other than one supplied.
- Do not fill kettle when positioned on base, dry the water on the bottom of the body before placing it on power base.
- Avoid water spillage on connector.
- Do not insert any food or objects into kettle.




WARNING!

Do not open the lid while the water is boiling.

- Do not place on or near a hot gas or electric burner, or inside a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.
- Do not use the appliance for purposes other than its intended use.
- Scalding may occur if the lid is removed during the brewing cycle.
- Do not pull, twist or otherwise abuse the power cord.
- Do not wrap the power cord around the main body of kettle.
- Make sure that the appliance is switched off before removing it from power base.

02 KNOW YOUR DIGITAL KETTLE

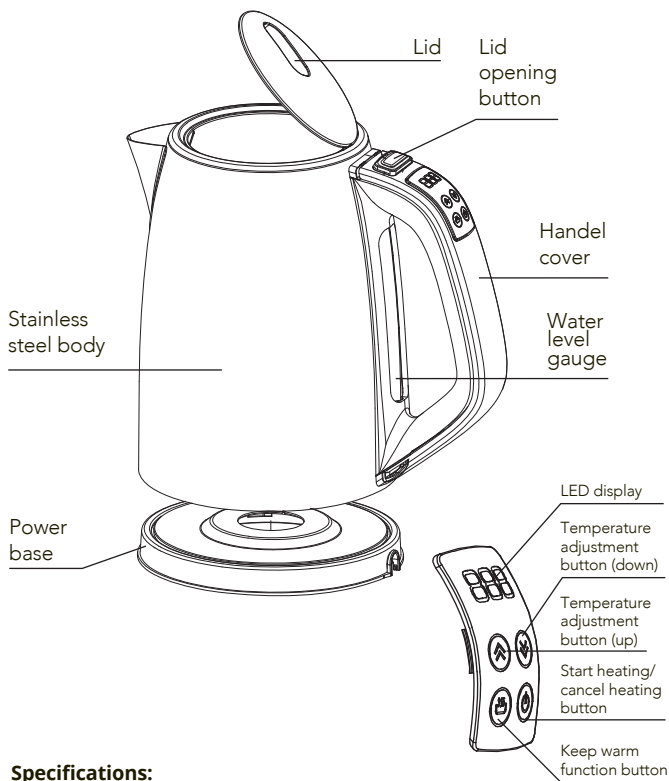

Specifications:

Min/Max capacity:	0,5 / 1,7 L
Temperature control:	from 40°C to 100°C - each 5°C
Rated voltage:	220-240 V~
Rated frequency:	50-60 Hz
Rated power:	1850-2200 W

03 BEFORE FIRST USE

Before the first time using, please boil up the water twice without any additives.

1. Remove the kettle from the packaging and position it on a stable, flat and dry surface.
2. Check that the voltage of your power supply matches the voltage rating of the electric kettle.
3. Before first use fill the kettle up to the maximum level, boil the water, pour it out and rinse the kettle. Repeat the procedure 2-3 times to remove manufacturing deposits, etc.
4. The kettle turns off automatically when the water has boiled. If necessary, you may turn it off using Start/Cancel.
5. After the water has boiled or the kettle has been switched off, wait several seconds before switching it on again.
6. If you switch the kettle on without water, the overheat protection will automatically shut the appliance off. Open the lid and leave the kettle to cool down for about 15 minutes before refilling.

04 INSTRUCTIONS FOR USE

1. Before filling the kettle with water, remove it from the base.
2. Open the lid and fill the kettle with water up to the desired level (between 0.5 L and 1.7 L).
3. After plugging the base into the power outlet, the display will turn on briefly, all buttons will light up, and the appliance will beep twice. This indicates that the base is connected to the power source and the kettle is properly placed on the base.
4. Close the lid and place the kettle on the power base. The appliance will beep once, the display will turn on, and the Start/Cancel button will start water heating. The current water temperature will be shown on the LED display. If no action is performed, the kettle will turn off automatically.

5. Press the Start/Cancel button without selecting any other functions. The kettle will turn on and beep, and the Start/Cancel button will light up red. The kettle will boil water up to 100 °C, then switch off automatically and beep three times.
6. If you only want to heat the water, use the boiling temperature buttons labeled 'Up' or 'Down'. Press once to adjust the temperature. The selected temperature will be shown on the display. You can choose from the pre-defined temperature settings, ranging from 40 °C to 100 °C in 5 °C increments. If the selected temperature is lower than the current water temperature in the kettle, the kettle will switch off automatically.
7. After the water reaches the selected temperature, the kettle will switch off and beep three times.
8. To activate the Keep-Warm function, press the Keep-Warm button. The Keep-Warm indicator light below the button will turn on. In this mode, press the 'Up' or 'Down' buttons to set the desired temperature. The temperature can be adjusted in 5°C increments, within a range of 40 °C to 100 °C. To turn off the Keep-Warm function, press the Keep-Warm button again, or press the Start/Cancel button to switch off the kettle. Otherwise, the water temperature will be maintained at the selected level. If no action is taken for 2 hours while in Keep-Warm mode, the kettle will switch off automatically. To turn the kettle on again, press the Start/Cancel button; the kettle will beep once.
9. Remove kettle from power base before pouring water out from kettle.

Temperature	Recommended Use
40-60°C	Blends for babies
70°C	Green and white tea
90°C	Instant coffee
100°C	Black tea

NOTE! The kettle may be used only with the based attached. Do not open the lid when boiling water.

05 CLEANING AND MAINTENANCE

Before cleaning, always unplug the kettle and ensure it has completely cooled down.

Never immerse the cable, plug, power base, or kettle in water or any other liquid.

Cleaning the exterior of the electric kettle.

Wipe the exterior of the kettle with a damp cloth, then dry with a soft dry cloth.

Never use harsh chemicals or abrasive cleaning agents, as these may damage the finish of your kettle.

NOTE! Regularly remove limescale deposits from the kettle according to the instructions below. Before cleaning, unplug the kettle and allow it to cool completely.

1. Fill the kettle with water to "MAX" indication and 1-2 table spoons or lemon juice (citric acid) or use a special descaling agent available in household stores.
2. Leave the solution in the kettle for 1 hour, then bring the water to the boil.
3. Empty the kettle and rinse it thoroughly with cold water.
4. If necessary, repeat the procedure 1-3 times.
5. Wipe the interior and exterior surfaces of the kettle with a cloth.
6. Regular descaling protects the kettle from damage.



WARNING!

Do not immerse the kettle or its base in water or any other liquid. This may cause electric shock or fire.

NOTE! Do not use a wire brush or any other abrasive objects. Do not clean the kettle with strong detergents.

Any other servicing should be performed by an authorized service representative.

06 TROUBLESHOOTING

Problem	Solution
The kettle won't turn on and doesn't respond to any button presses.	1. Ensure the electric kettle is connected to a power outlet before use. 2. Take a quick look at the power cord, if it looks damaged, stop using the kettle and get in touch with customer service. 3. Try connecting the electric kettle to another power outlet. 4. The kettle may not be operating correctly. Please reach out to customer support for assistance. 5. Make sure the kettle is properly seated on the base.
Water does not boil or heats slowly.	1. Ensure there is enough water in the kettle. 2. Check for limescale buildup and clean if necessary. 3. Make sure the kettle is properly seated on the base.
Kettle leaks water.	1. Do not overfill beyond the maximum mark. 2. Inspect for cracks or damage to the kettle body. 3. Ensure the lid is properly closed.
LED display does not light up.	1. Ensure the kettle is plugged in and power switch is on. 2. Check that the kettle is properly seated on its base. 3. Inspect the power cord and plug for damage.
LED display shows error or unusual symbols.	1. Turn off and unplug the kettle, wait a few minutes, then turn on. 2. Check the water level is within the minimum and maximum marks. 3. If the problem persists, contact an authorized service representative.
Water tastes or smells unusual	1. Clean kettle following maintenance instructions. 2. Always use fresh water.
Excessive noise during boiling	Clean kettle following maintenance instructions, because possible mineral deposits on heating element.
Kettle does not shut off after boiling	1. Ensure lid is closed firmly. 2. Descale the kettle to clear steam pathway.

07 PRODUCT COMPLIANCE AND DISPOSAL INFORMATION



At the end of its service life, this product may not be disposed of in the normal household waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their labelling. You make an important contribution to protecting our environment by reusing, recycling or utilising old devices in other ways. Please ask the municipal administration where the appropriate disposal facility is located.

08 CONTACT ZEPTER

Home Art & Sales Services AG
Sihleggstrasse 23,
CH-8832 Wollerau,
Switzerland

Zepter International Poland Sp. z o.o.
ul. Domaniewska 37,
PL-02-672 Warsaw,
Poland

quality@zepter.com
www.zestbyzepter.com

QR code to Zepter online store



09 WARRANTY STATEMENT

Thank you for choosing a ZEST by Zepter product. We take pride in providing high-quality appliances, where a design isn't just something you look at—it's something you feel.

Warranty Coverage:

This product is covered by a 2-Year limited warranty from the date of original retail purchase. During the warranty period, the manufacturer will repair or replace (at its discretion) any part of the product that is found to be defective in materials or workmanship, under normal household use and in accordance with the operating instructions.

What Is Covered:

This warranty covers defects in materials or manufacturing, electrical or mechanical malfunctions under normal usage, and the replacement or repair of faulty components at no charge.

What Is Not Covered:

Damage caused by misuse, abuse, or neglect. Failure to follow the instructions in the user manual. Normal wear and tear (e.g., scratches, discoloration, or worn-out parts). Accidental damage, fire, flood, or other external causes. Unauthorized repairs or modifications.

Conditions for Warranty Service:

A valid proof of purchase (original receipt or invoice) is required. The warranty period is not extended by repair or replacement. All servicing must be performed by an authorized service center.

How to Obtain Warranty Service:

If you experience any issues with your product, refer to the Troubleshooting section of the user manual.

If the issue persists, contact our Customer Support team:

Email: _____

Phone: _____

Website: _____

Please have your item number, serial number, and proof of purchase ready when contacting us.

10 WARRANTY CARD

Customer Information:

Name _____

Address _____

Phone Number _____

Email _____

Date of Purchase ____ / ____ / ____

Place of Purchase _____

Item Number _____

Serial Number _____

Lot Number _____

To ensure long-lasting performance and safe operation, please follow all safety precautions, usage instructions, and maintenance guidelines provided in this manual.

ZEPTER OWNED COMPANIES

BELARUS , Minsk	ITALY , Milan	ROMANIA , Bucharest
BULGARIA , Sofia	JORDAN , Amman	RUSSIA , Moscow
CANADA , Toronto	KAZAKHSTAN , Almaty	SERBIA , Belgrade
CZECH REP. , Prague	LATVIA , Riga	SLOVAKIA , Bratislava
CROATIA , Zagreb	LITHUANIA , Vilnius	SPAIN , Madrid
EGYPT , Cairo	MOLDOVA , Chisinau	UKRAINE , Kiev
ESTONIA , Tallinn	POLAND , Warsaw	USA , North Bergen
HUNGARY , Budapest	PRINCIPALITY OF MONACO , Monte Carlo	

ZEPTER DISTRIBUTORS

ALBANIA, Living Longer, Exclusiv Sh.p.k
ALGERIA, Newtech Algerie Division
ARMENIA, Travelon Ltd., Afina LLC
AZERBAIJAN, Royal Home Design LLC
AUSTRALIA, Dioswell PTY LTD, Zepter World Australia
AUSTRIA, Vienna, ZEBIZZCLUB GmbH
BANGLADESH, Adora BD Limited
BELGIUM, Haromed BVBA
BOSNIA AND HERZEGOVINA, Sarajevo, Banja Luka
CHINA, Shenzhen Shande Brothers Medical Biotechnology Co.Ltd
CYPRUS, Life's Quality Ltd
DENMARK, Govinda Consult APS
DOMINICAN REPUBLIC, Medicaluz
FRANCE, Paris HITEC Environment
GEORGIA, Limited Liability LLC
GERMANY, Sollingen, Sefeld MZV Deutschland GmbH
GUADALOUPE, SAS BEE'CONFORT
HOLLAND, Corrective Cosmetics Haromed BVBA
HONG KONG, Wessen Group Limited, Solutions Health Care, Gold Beauty Ltd.
ISRAEL, A.L.N. Import LTD
JAPAN, Aglex Inc.
KOSOVO, Living Longer, Exclusiv Sh.p.k
KUWAIT, Healthy Home Trading Co.
MACAU, Wessen Group Limited
MACEDONIA, Skopje, Exclusiv Sh.p.k
MAROCCO, Lilimpharm
MONGOLIA, Standlab Co Ltd
MONTENEGRO, Zepter d.o.o Podgorica, Exclusiv Sh.p.k
NEW ZEALAND, AJE Lifestyles Limited
NORWAY, Uno Vita AS Nailit A/S
PHILIPPINES, BCP Dermatological Corp
Saudi Arabia, Zepter Pandragora, Sagrma FZ-LLC
SINGAPORE, Zen'Yu Pacific Pte Ltd.
SLOVENIA, Slovenj Gradec, Status d.o.o. Metlika
SOUTH KOREA, Seoul, Angel Korea Ltd., Dooil GL Co.,LTD
SWEDEN, Galo Medical AB,
SWITZERLAND, Wollerau, Z-Elite GmbH, Life Resonance AG, Physiotherapie 011
TURKEY, Derma Medikal Kozmetik İthalat İhracat Ve Tic.Ltd.Şti.
UAE, Scarlett Trading Co., Zepter ME Trading LLC, Sagrma FZ-LLC
UK, Colour Ministry, UK
UZBEKISTAN, Tashkent, OOO Blayza
Home Art & Sales Services AG
Sihleggstrasse 23,
CH-8832 Wollerau,
Switzerland