 
 


USER MANUAL

INDUCTION COOKER IC-001

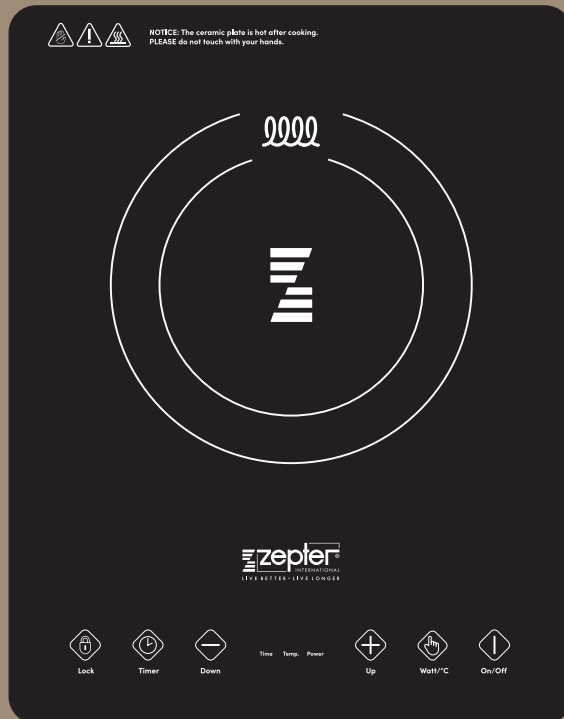

CONGRATULATIONS

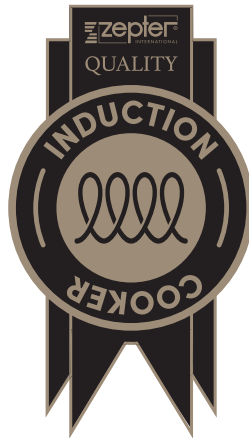

Congratulations on your purchase of the
Zepter Induction Cooker IC-001.

We are thrilled to welcome you to the Zepter family,
where quality and innovation meet to enhance
your culinary adventures.

With your new induction cooker, you will enjoy faster cooking times,
precise temperature control, and a safer cooking environment.
Whether you are a professional chef or a home cook,
our product is designed to meet your high standards
and simplify your cooking process.

 **zepter**[®]
INTERNATIONAL
LIVE BETTER • LIVE LONGER

USER MANUAL

INDUCTION COOKER IC-001

Contents

1. Important Safeguards	pag. 6
2. Caution	pag. 7
3. Device Specifications	pag. 8
4. How to Cook	pag. 8
5. Control Panel Functions	pag. 9
6. Suitable Cookware	pag. 10
7. Unsuitable Cookware	pag. 10
8. Recommendations	pag. 10
9. How to Clean	pag. 11
10. Troubleshooting	pag. 12
11. Declaration of Conformity	pag. 13
12. Disposal	pag. 13
13. Warranty	pag. 13

1. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Before use, read all instructions carefully.
2. **DO NOT** use the appliance for anything other than its intended use.
3. Check that the power rating of the Induction Cooker does in fact match that of your household electrical wiring system.
4. It is essential that the Induction Cooker is connected to an earthed socket.
5. **DO NOT** operate any appliance with a damaged cord or plug, or which has been found to malfunction or that is damaged in any manner. In order to avoid a hazard, return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
6. **DO NOT** use outdoors.
7. **DO NOT** place on or near a hot gas or electric burner, or nearby a heated oven.
8. Before using the Induction Cooker, please remove the transparent film on the control panel.
9. Close supervision is necessary when any appliance is used by or near children.
10. **DO NOT** touch hot surfaces.
11. To protect against electrical hazards **DO NOT** immerse the cord, plugs or Induction Cooker in water or in any other liquid.
12. **DO NOT** let the cord hang over the edge of tables or counters, or touch hot surfaces.
13. Extreme caution must be paid when moving an appliance containing hot oil or any other hot liquids.
14. To disconnect, turn all controls to "off", then remove the plug from the wall outlet.
15. Unplug from the wall outlet when not in use and before cleaning. Allow the appliance to cool down before putting on or taking off parts.
16. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
17. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Note: Children should be supervised to ensure not to play with the appliance.

2. Cautions

- Please put the Induction Cooker on a horizontal counter, keep away from the wall or any other objects by at least 10 cm.
- Please use a socket with a rated load above 10A, **DO NOT** plug other appliances into this socket, as sharing the socket may cause the outlet to overheat or spark.
- **DO NOT** overload the induction Cooker: the maximum weight supported is 40 kilos.
- **DO NOT** use the Induction Cooker in high humidity, or near heat sources.
- **DO NOT** put empty cookware when the Induction Cooker is ON.
- **DO NOT** put knives, forks, spoons, cookware lids or aluminium foil on the induction plate, as they may be heated.
- **DO NOT** put paper, cloth or aluminium foil between the cookware and induction plate, as this may cause accidents.
- **DO NOT** use the Induction Cooker on a carpet or tablecloth, as this may block the fan and vent, and affect the emanation of heat.
- **DO NOT** heat the induction plate if there is a crack in the surface. Please unplug the cooker immediately to avoid the possibility of electric shock and send the unit to the authorized service center.
- **DO NOT** reheat food in sealed containers such as cans, as this may cause them to explode.
- **DO NOT** move the Induction Cooker when there is cookware on it or when it is plugged in.
- Set the unit on a stable surface. **DO NOT** drop it.
- **DO NOT** unplug the Induction Cooker immediately after cooking; the induction plate may still be hot, **DO NOT** touch the plate until the “Plate Hot” red light has turned off.
- Be sure to keep the unit out of the reach of children, especially when cooking.
- **DO NOT** immerse the cooker into water or wash the cooker directly under running water.
- Keep the Induction Cooker clean so that no dirt can get into the cooker, as this may cause damage.
- **DO NOT** damage the power cord and **DO NOT** attempt to repair it if it is damaged. To avoid damage to the power cord, never attempt to customize the cord. Keep the cord away from high temperatures. Avoid unnecessary bending, twisting or pulling on the cord. Never place heavy objects on the cord or attempt to tie it up. Using a damaged power cord can lead to electrical shock, short circuit or fire. Consult your nearest sales dealer if the electrical cord or plug are in need of repair.
- Ensure that the plug fits all the way into the outlet. Partially plugged-in cords may cause electric hazards.
- **DO NOT** interrupt the power while using the Induction Cooker.
- The fan will still be running for 1 minute after the Induction Cooker has been turned off.


3. Device Specifications

Model No.:	IC-001
Power Supply:	220-240V~50Hz
Rated Import Wattage:	2000 Watts
Wattage Range:	100-2000W
Temperature Range:	60-240°C


4. How to Cook

1. After inserting the plug into the socket, you will hear a “Beep” followed by the flashing of the indicator above the (On/Off) key. The appliance is in the standby mode.
2. Place a suitable cookware in the center of the cooking plate.
3. Press the corresponding function key to start operation.
4. Stop the operation and switch to standby mode by pressing (On/Off) Key after cooking.

 5. Control Panel Functions

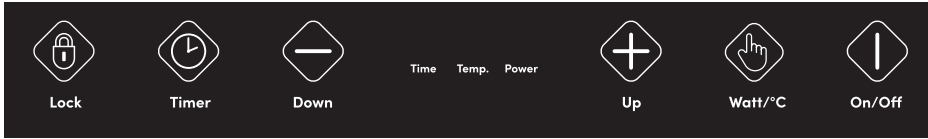


Power /°C

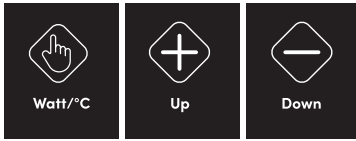 

- Press **Watt/°C** to illuminate the power indicator.
- The power can be adjusted by pressing **+** or **-** to set the desired power level to a maximum of 2000 W.

 Timer

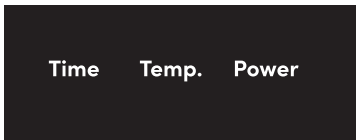

- Beside **Power** and **Temp.** (Temperature) function modes, the user can press **Time** to set the cooking time.
- Press **+** or **-** to set the cooking time, press once for each 1 minute that you wish to add. The desired time can be adjusted from 0 to 3 hours.

Child Lock



- To activate the child lock mode, the user can press the **Child Lock icon**.
- This will lock the appliance into the preset mode and revise the temperature to pre-programmed levels.
- Hold for 3 seconds to unlock this feature.

6. Suitable Cookware

 
1. Cookware made of enamel coated steel with or without a non-stick coating.
2. Cast iron cookware with or without an enamel coated base.
3. Stainless steel cookware designed for induction cooking.
4. Aluminium cookware with a special base.

7. Unsuitable Cookware

Glass, ceramic, earthenware, aluminium cookware without a special base or with a copper base, and certain non-magnetic stainless steel pans.

8. Recommendations

The cookware has to be positioned centrally on the plate.
The cookware has to be with diameter over 12 cm.

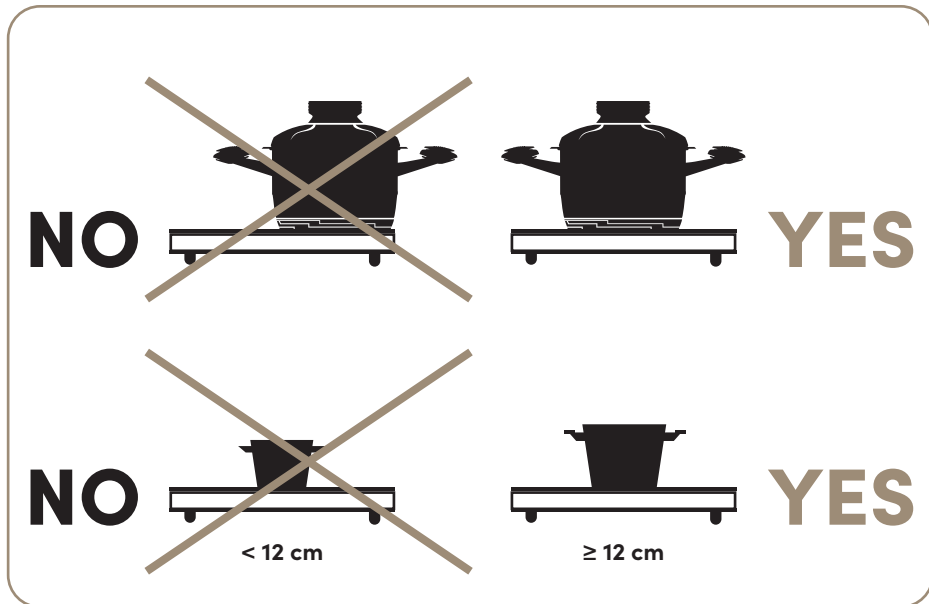

9. How to Clean

Be sure to unplug and carry out these operations when the unit has cooled down.



Induction top-plate:

Please use a wet cloth to wipe off dirt; cleansing powder may be used to clean the top-plate.



Cooker body and control panel:

Please use a wet cloth to wipe off. If an object has become stuck, wash with washing-up liquid and wipe off with a soft cloth.



Surface of fan and vent:

Wipe off dirt with a cotton stick, wash with washing-up liquid first if there is oily dirt on the fan and vent.

10. Troubleshooting

	PROBLEM	CHECK
1	The appliance does not beep when plugged in and the LCD display is not on.	<ul style="list-style-type: none"> • Make sure the appliance is plugged in properly. • Make sure the wall socket is functioning.
2	The appliance emits a continuous warning beep and stops running.	<ul style="list-style-type: none"> • Check if the cookware is suitable for induction cooking. • Make sure the cookware is positioned centrally on the hot plate. • Check if the diameter of the cookware is wider than 12 cm.
3	The appliance suddenly stops heating during operation.	<ul style="list-style-type: none"> • Check if the temperature is too high. • Check if the ventilation holes are blocked. • When the set temperature is reached, the machine stops running automatically. • Sometimes the protection device is operating, please wait for about 10 mins. and check again.
4	Error code: E0 = no pot or circuit fault E1 = low voltage (lower than 85 V) E2 = high voltage (higher than 275 V) E3 = cookware temperature sensor short circuit E4 = IGBT temperature sensor short circuit E5 = glass surface temperature is too high E6 = temperature sensor is too high E7 = the inductors are defective	<ul style="list-style-type: none"> • For E0, check if a suitable cookware is placed on the cooker. • When showing E1 and E2, correct by adjusting the voltage. • For E3, E4, E5, E6 and E7 please contact your local service center.

Please note:

- It is quite normal to hear a whistling noise during use. This is caused by the interaction between the cookware and the induction coil. This noise is technically unavoidable and depends on the type of cookware.
- **DO NOT** attempt to repair the defective unit. Take the unit to the nearest authorized service center.

11. Declaration of Conformity



The induction cooker complies with European directives:

- a) Directive 2014/35/EC of the European Parliament and of the Council relating to electrical equipment designed for use within certain voltage limits.
- b) Directive 2014/30/EU of the European Parliament and of the Council relating to electromagnetic compatibility (recast).
- c) Directive 2011/65/EU of the European Parliament and of the Council on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

EC declaration of conformity guarantees that the device is safe and has been inspected and tested to meet all the requirements specified in the applicable standards, directives and regulations.



The serial production meets the requirements of:

Technical Regulations of the Customs Union 020/2011 "Electromagnetic Compatibility of Technical Products".

Technical Regulations of the Customs Union 004/2011 "On Safety of Low-Voltage Equipment".

12. Disposal



At the end of the induction cooker lifetime, we recommend not to dispose of the appliance as ordinary waste, but to leave it with personnel qualified to collect such material. In this way, it will be properly disposed of and recycled. This is a valuable aid for safeguarding our environment!



If you want to dispose of the packaging, make sure you comply with the environmental regulations applicable in your country.

13. Warranty

Zepter International warrants that your induction cooker will be free from defects in material or workmanship at the time of its original purchase for a period of two (2) years. The 2-year warranty is related to the most essential parts of the device.

INDUCTION COOKER
IC-001



shop.zepter.com
Home Art Sales and Services
Sihleggstrasse 23
CH-8832 Wollerau,
Switzerland

zepter[®]
INTERNATIONAL
LIVE BETTER · LIVE LONGER