

USER MANUAL

TP-001

EasyToast Pro

Bread toaster with 6 levels of bread browning




zepter®
shop.zepter.com

**PLEASE READ AND SAVE THESE
IMPORTANT INSTRUCTIONS**

Table of Contents

1. Safety Instructions	4
2. Know Your Product	7
2.1 Technical Data	7
2.2 Product Features	7
3. Before First Use	8
4. Instructions for Use	8
5. Cleaning and Maintenance	9
6. Troubleshooting	9
7. Disposal Information	10
8. Contact Zepter	11
9. Warranty	12

Other Languages

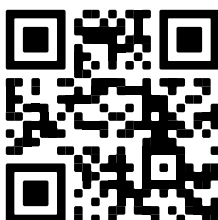

1. Safety Instructions

Read these instructions carefully before first use.

Keep them for future reference.

Use the appliance only as described in this manual.

Misuse may cause cuts, electric shock, or other injury.

If you transfer the appliance to another person, include this manual.

Ensure the mains voltage on the rating label matches your local supply.

Connect only to a properly grounded socket.

Do not use extension cords or multi-socket adapters unless rated for the toaster's load.

To avoid hazardous situations, never connect this appliance to a timer switch or remote control system.

NOTE: This appliance is intended for household and similar applications only.



WARNING!

This appliance shall not be used by children.

- Keep the appliance and its cord out of reach of children.
- Keep packaging out of reach of children.
- Children shall not play with the appliance.
- Cleaning and maintenance must not be performed by children.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction for using the appliance in a safe way and understand the hazards involved.



WARNING!

Do not use the appliance if the cord, plug, or appliance is damaged.

- If the mains cord is damaged, it must be replaced by the manufacturer or Zepter authorized service center.
- Do not let the cord contact hot surfaces, sharp edges, or hang over table edges.



WARNING!

Do not operate the toaster inside cupboards, under shelving, or in enclosed spaces. Ensure adequate clearance above and around the appliance to prevent overheating and fire.

- Always unplug the appliance immediately after use.
- Do not cover the toaster during operation.
- Place the appliance only on a flat, dry, and stable heat-resistant surface.

- Bread may ignite if toasted too long — do not leave the toaster unattended.
- Do not insert fingers or foreign objects into slots.
- Do not insert oversized, metallic, or wrapped food items.
- Do not use outdoors or in damp environments.
- Do not use this appliance as a heat source.
- Do not use the appliance for any purpose other than its intended use (toasting bread).
- Never operate the toaster in close contact with flammable materials such as curtains, wallpaper, cabinets, or electrical wiring.

NOTE: Use only for toasting bread. Use only standard toast sizes. If the toast is too small, you may burn your fingers when removing the toast. Make sure that you remove bread very carefully after toasting is complete, in order to avoid injury.



WARNING!

Disconnect from mains before cleaning, moving, or when not in use.

- Remove crumbs regularly to prevent build-up and fire risk.
- Allow toaster to cool completely before cleaning.
- Do not immerse the toaster, cord, or plug in water or other liquids.
- Ensure no water enters the toaster during cleaning.
- Do not use abrasive cleaners or solvents.



WARNING!

Use only original manufacturer's accessories and spare parts.



WARNING!


Repairs must only be carried out by the manufacturer or authorized service center.



WARNING!

Immediately remove the power plug from the power socket if you notice smoke or fire!

EasyToast Pro

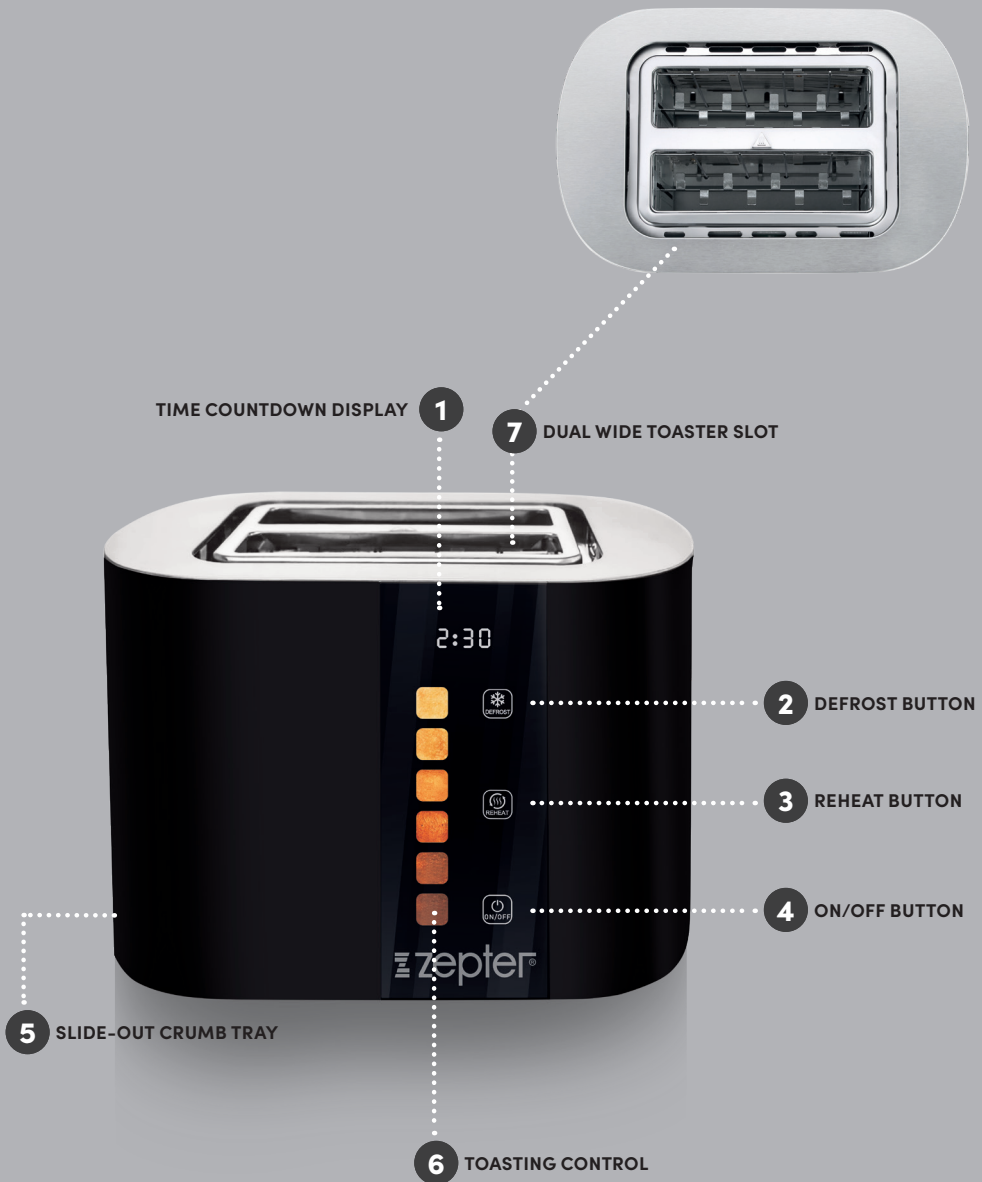

2. Know Your Product

2.1 Technical Data

Rated power	220-240V AC 50/60Hz
Power consumption	800W
Ambient temperature	0-40°C
Features	• Adjustable degree of browning (6 levels) • LCD touch screen • Fully automatic

2.2 Product Features

- 1 TIME COUNTDOWN DISPLAY:**
Displays the time of toasting.
- 2 DEFROST BUTTON:**
Defrosts and toasts frozen bread.
- 3 REHEAT BUTTON:**
Reheats gently.
- 4 ON/OFF BUTTON:**
Stops/starts the toasting process.
- 5 SLIDE-OUT CRUMB TRAY:**
Easy to clean removable tray located on the bottom of the side opposite to all of the toasting controls.
- 6 TOASTING CONTROL:**
Features six browning levels.
- 7 DUAL WIDE TOAST SLOT:**
Versatile wide toast slot for a variety of bread types.

3. Before First Use

- Remove all packaging materials, stickers, and protective films. Keep packaging out of reach of children. Familiarize yourself with all warnings and instructions in the manual before operating.
- Ensure you understand the hazards (hot surfaces, fire risk, electrical safety).
- Before the first toasting, try 1-2 times of no-load heating to remove the moisture and smell inside the appliance. Smoke or smell are normal during first use.
- Check whether the power cord is in good condition. If it is damaged, do not continue to use the appliance.

4. Instructions for Use

1. Connect the power cord to a power socket.
2. Insert your bread for toasting.
3. Enter the working interface, tap the twinkling bread pattern to activate the screen.
4. Choose the browning level.
5. Press the ON button.

Once the process is complete, the bread will pop up automatically, this means that the toasting process has finished and the bread slices can be taken out carefully. You can stop the toasting process at any moment by pressing the ON/OFF button.

WARNING! Do not let the power cord hang on the edge of the table or touch a hot surface.

- Do not try to move the bread while toasting.
- Do not add toppings to the bread, causing things to melt or drip in the toaster, nor do not toast buns, mini baguettes, etc.
- Do not place shredded bread in the toaster.
- Do not put buttered bread or wrapped foods in the toaster.
- Do not try to toast very thick slices of bread that could block the toasting mechanism.
- Do not insert non-food objects into the toaster.
- This appliance is designed for toasting bread, bagels, waffles, English muffins. Do not attempt to toast other foods, as this may create a risk of fire.

5.Cleaning and Maintenance

- Disconnect the power cord and wait for the device to cool down.
- Remove crumbs from the crumb tray by sliding the tray outwards.
The tray must be completely dry before placing it back into the toaster.
- When cleaning, use a paper towel or cloth to wipe the surface of the appliance.
Use a stiff brush to remove any burnt-on crumbs.

WARNING!

When cleaning, do not immerse the toaster in water or pour water into it.

6.Troubleshooting

Problem	Possible Cause	Solution
Smoke is emitted during operation.	The selected toasting mode is too hot for the type of bread used.	Cancel the operation, replace the bread slice, and select a suitable toasting mode.
	Food residues are inside the toaster or on the slot surfaces.	Clean the interior and slot surfaces thoroughly, then restart the toaster.
	The crumb tray is full.	Remove and clean the crumb tray, then restart the toaster.
	The bread has a high oil or sugar content.	Use bread with lower oil or sugar content, or select a milder toasting mode before restarting the toaster.
Bread does not pop up automatically after toasting.	The bread slice is too large and becomes stuck in the slot.	Disconnect the power supply, allow the toaster to cool, remove the bread using tongs, clean the toaster, and restart it.
The program stops or crashes during operation.	System malfunction or obstruction.	Disconnect the power supply, allow the toaster to cool, remove the bread with tongs, clean the toaster, and restart it.

The electric motor stops working.	Motor malfunction.	Cancel the program, disconnect the power supply, wait for the toaster to cool, remove the bread with tongs. Contact an authorized Zepter service center.
The toaster does not operate.	Possible internal wiring problem.	Contact an authorized Zepter service center.

7. Disposal Information



The marking indicates that the product should not be disposed of with other household waste. In order to prevent uncontrolled waste disposal from causing harm to the environment or human health, responsible recycling can promote the sustainable reuse of material resources.

To return old equipment, use the return and collection system or contact the retailer who purchased the product they can use the product for environmental safety recycling.



If you want to dispose of the packaging, make sure you comply with the environmental regulations applicable in your country.

8.Contact Zepter

Distributed by:

Home Art & Sales Services AG
Sihleggstrasse 23,
CH-8832 Wollerau,
Switzerland

EU address:

Zepter International Poland Sp. z o.o.
ul. Domaniewska 37,
PL-02-672 Warsaw,
Poland

E-mail: quality@zepter.com



9.Warranty

Zepter International warrants that your ZEPTEK EaZy Toast Pro will be free from defects in material or workmanship at the time of its original purchase for a period of two (2) years. The 2-year warranty is related to the most essential parts of the device.

Model	Eazy Toast Pro TP-001
Serial No.	
Lot No.	

CUSTOMER’S DETAILS

Name and surname	
Address	
Phone number	
E-mail	
Invoice number	
Invoice date	

SERVICE CONTACT

Name	
Address	
E-mail	
Phone number	

EaZyToast **Pro**

EasyToast Pro